


Installation Instructions for Passive Restraint Graco® - MetroLite™ Strollers

October, 2010

Dear Valued Customer:

The enclosed fabric passive restraint is being provided to you as an added measure of safety while using your Graco® stroller. You must continue to use the harness on your stroller after installing the passive restraint. This restraint is intended for use on the MetroLite™ strollers that were manufactured prior to July 1, 2007. Please carefully follow these instructions when installing the passive restraint.


Passive Restraint Features:

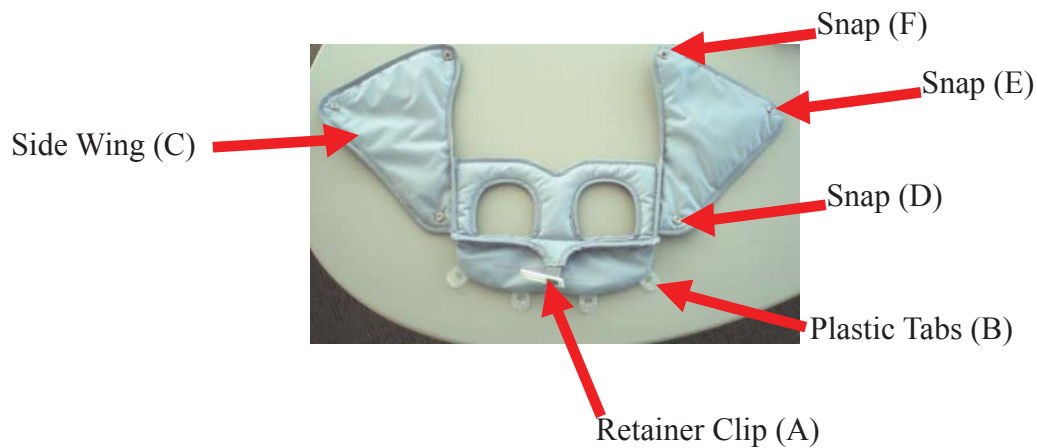

1. Open tray and unsnap both sides of the basket from the front of the stroller as shown



2. Unfasten the snap and the snap strap on the armrest cover from both sides of the stroller as shown.

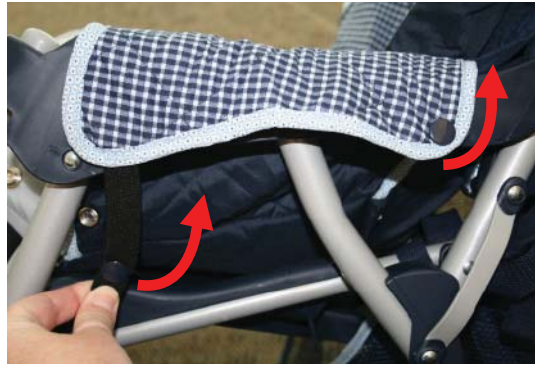


3. Lay both armrest cover flaps in the seat as shown.



4. Place the passive restraint with the retainer clip (A) facing inside the seating area.



5. In the seating area, push existing crotch buckle retaining clip towards rear of seat.

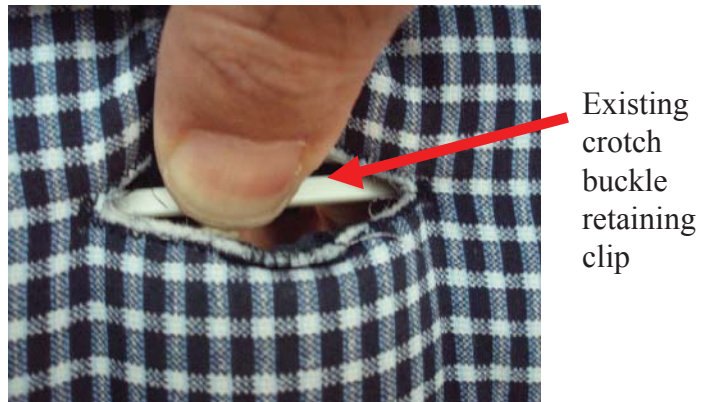

6. Insert retainer clip (A) from the passive restraint through the slot in the seat pad. **MAKE SURE** to insert the retainer clip in front of the existing crotch strap as shown in photo.



7. Pull retainer clip completely through to the underside of the seat base.



8. Retainer clips should appear as shown flat against bottom of seat base as shown.



9. Carefully insert and pull through, each of the 4 plastic tabs (B) on the passive restraint through the same slots used for the existing seat pad tabs.



10. Grasp the plastic tabs and hook them over the existing tab hooks under the seat as shown.

NOTE: Plastic tabs may be difficult to attach over hooks, to allow for easier installation push the edge of the restraint fabric into the groove along the edge of the seat.

Edge of restraint fabric




11. When all the tabs are securely fastened to the hooks on the bottom of the seat edge, the restraint should appear as shown.



12. Position the side wing (C) as shown to locate snap (D).

Lay the side wing over the armrest as shown.

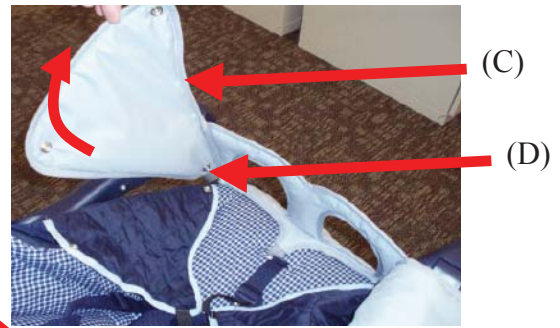


13. Fasten snap (D) on the side wing to the inside of the seat pad armrest cover as shown.




14. Wrap the side wing over the armrest as shown.



15. Fasten snap (E) to armrest as shown.

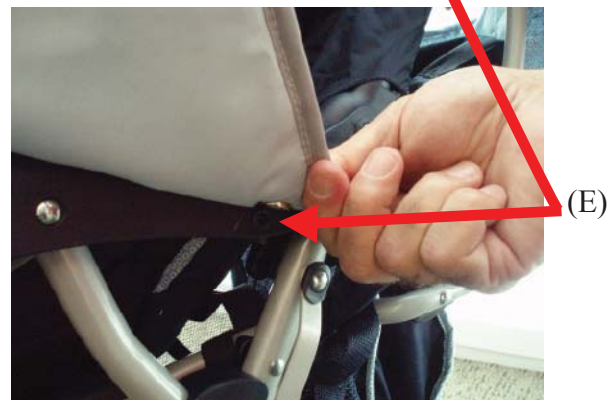

16. Fasten snap (F) to restraint as shown.

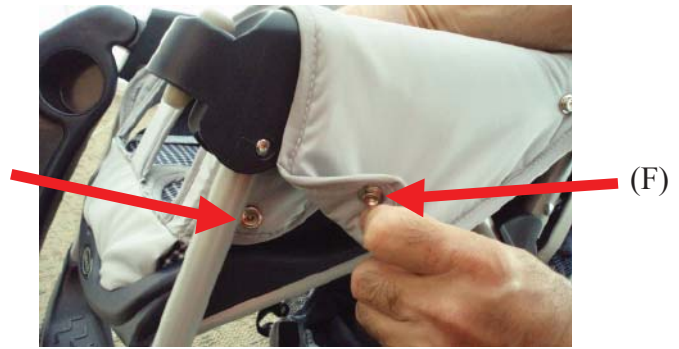

17. Passive restraint should appear as shown. Repeat Steps 12-16 on the other side of the armrest.



18. Wrap seat pad armrest cover over top of the passive restraint and fasten snap as shown.



19. Fasten seat pad armrest cover snap strap to snap on restraint as shown. Repeat Steps 18-19 with the other seat pad armrest cover.



20. Re-attach both sides of the basket to front of the stroller as shown.



21. Passive restraint should appear as shown when fully assembled.



22. Close and latch child tray. Make sure the passive restraint is located on the inside surface of the tray as shown



WARNING : Never remove the passive restraint except for cleaning. Failure to use this restraint may result in entrapment and strangulation.

If you have any questions or concerns regarding the installation of this passive restraint, please contact Graco Customer Service at 1-800-345-4109 between the hours of 8am and 5pm ET Monday – Friday.

For additional information and a video demonstration on the proper installation of this passive restraint please visit www.gracobaby.com

Thank you for installing this added safety feature to your stroller.

Sincerely,
Graco Children's Products Inc.

